

PROGRAM PERSONAL SPEED DIAL NUMBERS

You have 10 speed dial numbers by default. This can be increased if you require more.

ACTION

1. Press **TRSF 105**

Display shows

 
DISPLAY

[201] SPEED DIAL

00:

2. Dial the speed bin desired (e.g., 05)

OR press **UP** or **DOWN VOLUME** to make the selection and press the right hand key, next to the Scroll key, to move the cursor (the **MUTE** key)



[201] SPEED DIAL

05:

3. Enter 9 – the system automatically inserts a dash) followed by the phone number and press the right hand key to return to step 2

[201] SPEED DIAL

05: 9-121223456789

4. Press **TRSF** to store and exit programming

PROGRAM SPEED DIAL NAMES (IF APPROPRIATE)

This procedure allows a name to be assigned for each system speed dial location, up to 11 characters. This name enables you to locate the speed dial number when you are using the directory dial feature.

ACTION	DISPLAY
1. Press TRSF 106	[201] SPEED NAME
Display shows	00:
2. Dial the system speed number (e.g., 05) OR press UP or DOWN to select the	[202] SPEED NAME 05:
entry number and press the right hand key (MUTE) to move the cursor	
3. Enter the name	[202] SPEED NAME 05: SAMSUNG
4. Press the right hand key to return to step 2 above	

HOLD deletes the entry

VOLUME keys push the cursor forwards and backwards if the next letter is on the same keypad as the previous ie **HOME**

REDIAL on some systems will enter the Speed dial/name details into Incoming Caller Table. This will allow you to see the incoming number as a name. Note, you need ISDN lines for this to work.