


## ISDN and DDIs

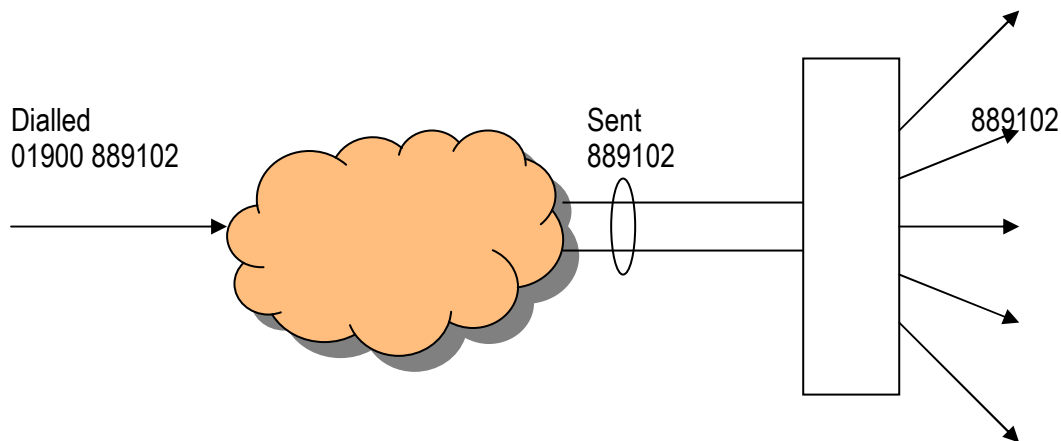

## OPEN SYSTEM WIDE PROGRAMMING

While your handset is on-hook, press

### ACTION

TRSF and then dial 200

Dial the four-digit password, 1234

Dial 1 to enable

Press TRSF. The keyset returns to its idle condition

### DISPLAY

[ENABLE CUS. PROG. PASSCODE]

[ENABLE CUS. PROG. - DISABLE]

[ENABLE CUS. PROG - ENABLE]

## PROGRAM DIRECT DIAL NUMBERS

Open programming (as above) and follow the instructions below.

### ACTION

1. Press TRSF 714

Display shows as above

2. Using the volume key, find the next empty bin. When found,

Press the MUTE or SAVE key which is the right hand key next to the SCROLL key.

The cursor should now be on the right hand side Of **DGT:** \_

Enter the DDI number which must be a 6 digit number

Press the MUTE or SAVE key

### DISPLAY

**DID DIGIT (001)**

Display shows

**MOH: NONE PRI:NO**

Press the MUTE or SAVE key twice

**Display shows**

**1:NONE 2: NONE**

Type in the extension that you want to point the DDI to.

Display shows

**1:215 2: 215**

The system will automatically save the extension. Repeat for the 6 fields. (Each field relates to the different modes or services you have ie 1 is NIGHT and 2 is DAY)

You can optionally add a name to the DDI by pressing the MUTE or SAVE key 3 times

Display shows

**NAME:**

You can now add in the name of the DDI ie: John DDI which will be shown on any display phone when that DDI is rung.